

VINYL SHEET INSTALLATION INSTRUCTIONS

STEP 1 INSPECT AND PREPARE SUBFLOOR

IF INSTALLING OVER:

Old Vinyl Flooring

INSPECT:

Must be non-cushioned backed and firmly bonded. Check for loose vinyl, gapped seams, cuts, tears, rips, or other damage.

PREPARE:

- Utility Knife (to remove loose vinyl)
- New Beginning Extra Strength Cleaner (removes dirt and wax build-up)
- S-199 One-Part Embossing Leveler (fills and levels embossing on your old vinyl flooring)
- Smooth Edge Trowel (for applying S-199)
- Sanding Block (use medium grit sandpaper for smoothing rough areas of the embossing leveler)

IF INSTALLING OVER:

Plywood

INSPECT:

If installing a new plywood subfloor, use APA Underlayment Grade. For a new or existing plywood subfloors, check for loose panels, gapped joints, knots, nail holes, or other damage.

PREPARE:

- S-184 (for patching or filling textured surfaces)
- Smooth Edge Trowel (for applying S-184)
- Sanding Block (use medium grit sandpaper for smoothing rough areas of the patch)
- S-185 Latex Primer (for a superior bond)
- Short Nap Paint Roller (for applying S-185)

IF INSTALLING OVER:

Concrete/Ceramics




INSPECT:

Must be clean, dry, and dust free. Check for cracks, scaling, levelness, and other damage. If installing over ceramic tile, terrazzo, or marble, insure that the tiles are firmly bonded.




PREPARE:

- S-184 (for patching or filling textured surfaces)
- Smooth Edge Trowel (for applying S-184)
- Sanding Block (use medium grit sandpaper for smoothing rough areas of the patch)
- S-185 Latex Primer (for a superior bond)
- Short Nap Paint Roller (for applying S-185)

STEP 2 MAKE A PAPER PATTERN OF THE ROOM

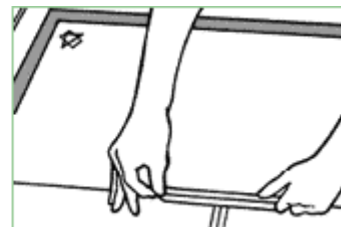
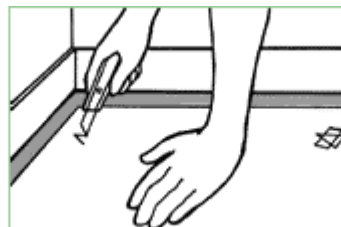
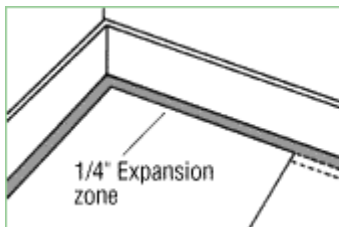


STEP 3 TRACE PERIMETER OF ROOM ONTO PATTERN

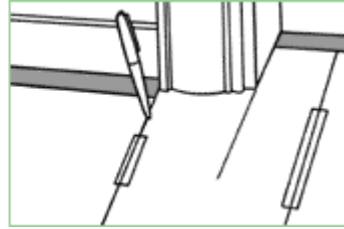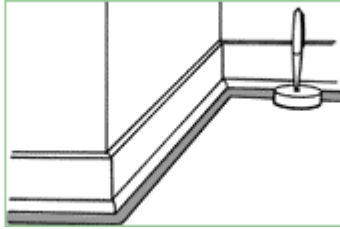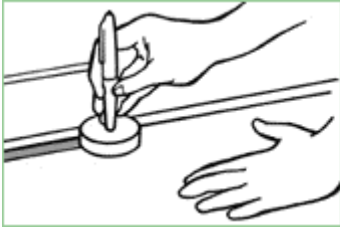

STEP 4

TRANSFER TRACING ONTO NEW FLOOR

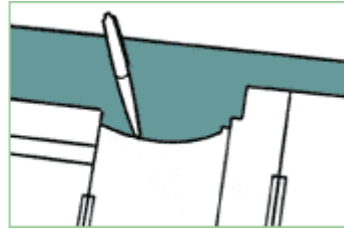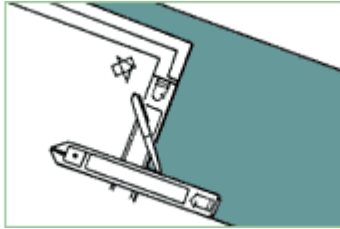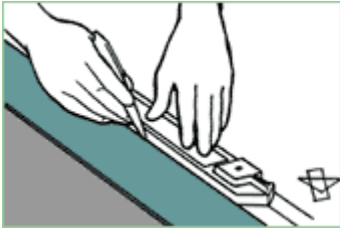

STEP 5

CUT NEW FLOOR TO FIT ROOM

STEP 6

INSTALL

STEP 7

ROLL THE FLOOR

