



Natural Quartz Vanity Top Installation

Please read all instructions
before beginning installation

Tools Required:

- Silicone Caulk
- Shims

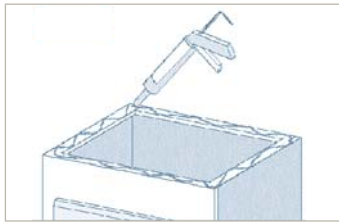


Figure 1



Figure 2

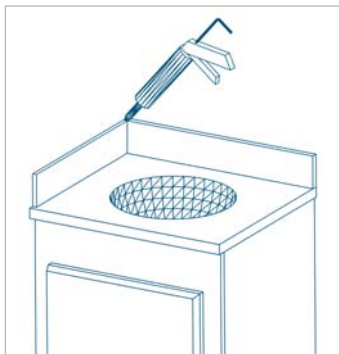


Figure 3

1. Unpack the vanity top and inspect it for damage. Report any damage to your place of purchase.
2. Make sure the top sits securely on the cabinet. Transolid recommends using shims in areas where there is not a solid point of contact or where the top is not level on the cabinet.
3. Install the faucet and the drain assembly according to the manufacturer's instructions.
4. Wipe off the top of the vanity cabinet with a damp cloth to remove any dirt. Apply a generous ($\frac{1}{2}$ ") bead of silicone around the top edges of the vanity cabinet. See Figure 1.
5. Carefully lower the top onto the vanity cabinet, making sure that the shims stay in place. See Figure 2.
6. Attach the drain pipe to the drain assembly. Attach the water supply lines to the faucet.
7. If back splash is to be installed, do so at this time. Test fit the back splash to determine proper fit, and which side will face out and which side will face the wall.
8. Wipe the bottom of the back splash and the top of the vanity with a damp cloth to remove any dust or dirt.
9. Apply a thin ($\frac{1}{4}$ ") bead of silicone along the bottom edge of the back splash and several thin beads along the back (wall) side of the splash. Set the back splash into place.
10. If side splashes are to be installed, follow steps 7-9.
11. Apply a thin bead of caulk around all of the joints, such as the one between the top of the back splash and the wall, the side splash and the wall, the vanity top and the back splash, and the vanity top and the side splash. See Figure 3.