



Installation Instructions: Sliding Door Rubber Bumper and Retainer

Parts Included:

Retainer #8-32 x 1/2" screws (2)
Rubber bumpers (2) #8 x 1" screws (4)

Tool required: #2 Phillips screwdriver

1. Slide the vent door panel to the full open position. From the exterior, locate the two predrilled holes near the center of the sill (base of the sliding door frame). Align the "L" shaped retainer over the holes with the leg toward the exterior and secure with the two #8-32 x 1/2" screws (see figure 1). (Shown with accessory footbolt sold separately.)

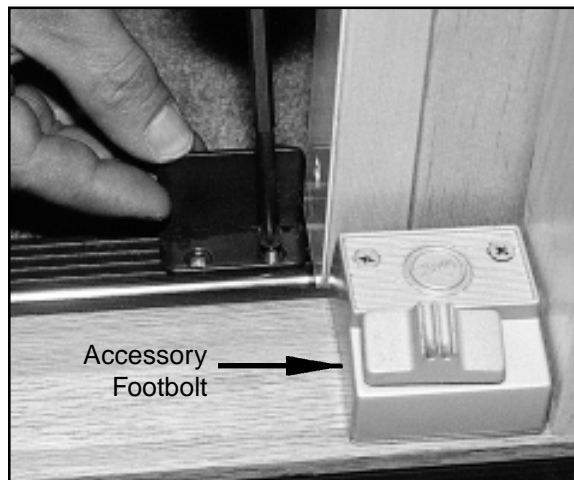


Figure 1

2. Slide the vent door panel to the closed position. Locate the predrilled holes near the top of the sliding door track (head of the sliding door track). Install one rubber bumper with two #8 x 1" screws (see figure 2).



Figure 2

3. Locate the predrilled holes near the end of the sill and install the other rubber bumper with #8 x 1" screws (see figure 3).



Figure 3