



Solid Surface Vanity Top Installation

Please read all instructions before beginning installation

Tools Required:

- Silicone Caulk
- Shims

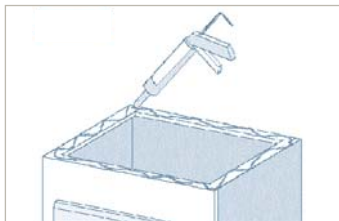


Figure 1

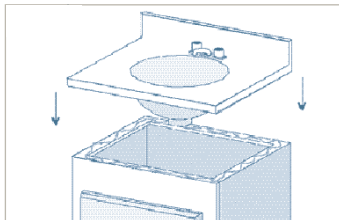


Figure 2



Figure 3

1. Unpack the vanity top (ITB) and inspect it for any damage, report any problems to your place of purchase.
2. Make sure the ITB sits securely on the cabinet, with a solid point of contact at least every six inches around the perimeter of the cabinet. Transolid recommends using shims in areas where there is not a solid point of contact or where the ITB is not level on the cabinet.
3. If your ITB did not come with the faucet holes already drilled, you will need to drill them at this time. See Instructions for Faucet Hole Drilling on the back of this page.
4. Install the faucet and the drain assembly according to the manufacturer's instructions.
5. Wipe off the top of the vanity cabinet with a damp cloth to remove any dirt. Apply a generous ($\frac{1}{2}$ ") bead of silicone around the top edges of the vanity cabinet. See Figure 1.
6. Carefully lower the ITB onto the vanity cabinet, making sure that the shims stay in place. See Figure 2.
7. Attach the drain pipe to the drain assembly. Attach the water supply lines to the faucet.
8. If side splashes are to be installed, do so at this time. Test fit the side splash, and determine which side will face out and which side will face the wall.
9. Wipe the bottom of the side splash and the top of the vanity with a damp cloth to remove any dust or dirt.
10. Apply a thin ($\frac{1}{4}$ ") bead of silicone along the bottom edge of the side splash and several thin beads along the back (wall) side of the side splash. Set the side splash into place.
11. Apply a thin bead of caulk around all of the joints, such as the one between the ITB and the wall, the side splash and the wall, and the ITB and the side splash. See Figure 3.