


INSIDE MOUNT WITH Z-FRAME

MOUNTING

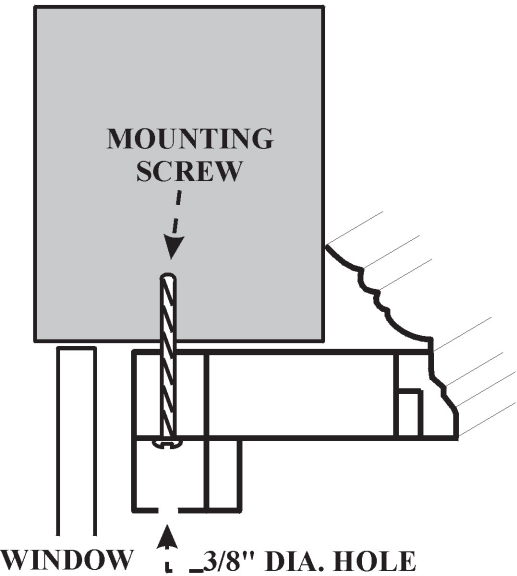

SQUARENESS ADJUSTMENTS


MOVES LEFT
PANEL UP

UP



DOWN

MOVE LEFT
PANEL DOWN

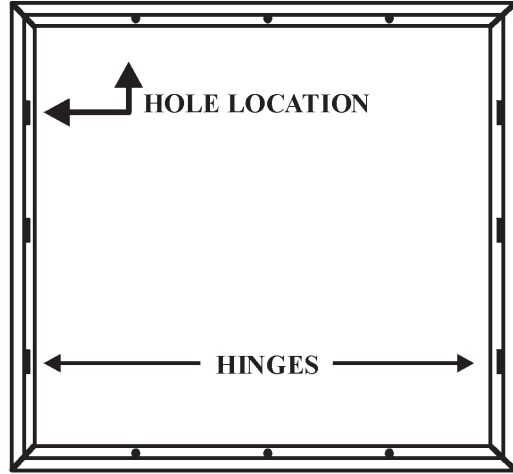

MOVES RIGHT
PANEL UP

UP



DOWN

MOVE RIGHT
PANEL DOWN

LEFT ← - | (A) | - → RIGHT

MOVES LEFT PANEL DOWN
AND RIGHT PANEL UP

MOVES LEFT PANEL DOWN
AND RIGHT PANEL UP

1. Assemble frames.
2. Drill 3/8" dia. holes (through extrusion outside wall only) into light block directly below hinge location.
3. Place frame inside the opening, and center.
4. Partially install 2 upper corner screws and 2 bottom corner screws. (Do not over tighten)
5. Hang panels using hinge pins.
6. Close shutters and check for squareness.
7. To square panels inside the frame do one or a combination of the following:
(See squareness diagram, top)
 - A) Move bottom frame left or right (See adjustment diagram)
 - B) Move left frame up or down (See adjustment diagram)
 - C) Move right frame up or down (See adjustment diagram)
8. Once panels are square within the frame fasten screws (Do not over tighten) to achieve a firm and straight frame, and provide an even top and bottom clearance (1/8").
9. Cover holes with hole plugs.
10. Install magnetic catches.